



INSTALLATION INSTRUCTIONS FOR PART 95-9308B

INSTALLATION INSTRUCTIONS FOR PART 95-9308B

APPLICATIONS **BMW X5 2000 - 2006** (non-navigation models) **95-9308B**


KIT FEATURES

- DDIN Head Unit Provision
- ISO Stacked Head Unit Provision
- Painted Scratch Resistant Matte Black



KIT COMPONENTS

- DDIN Radio Trim Plate
- DDIN Brackets
- (4) Plastic Snaps
- (8) Flush ISO Screws

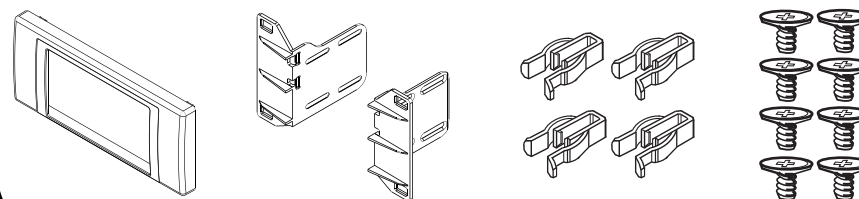

TOOLS REQUIRED

- Phillips Screwdriver
- Torx Screwdriver
- Panel Removal Tool
- Small Flat Blade Screwdriver
- Cutting Tool or File



METRA. THE WORLD'S BEST KITS.™



1-800-221-0932



metraonline.com

© COPYRIGHT 2004-2009 METRA ELECTRONICS CORPORATION

METRA. THE WORLD'S BEST KITS.™



1-800-221-0932



metraonline.com

© COPYRIGHT 2004-2009 METRA ELECTRONICS CORPORATION



95-9308B

NOTES

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.

- **BMW X5 2000 - 2006 3**

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.

This image shows a full page of white paper with horizontal blue ruling lines. The lines are evenly spaced and run across the width of the page, providing a template for handwriting practice or general writing. There are no margins, text, or other markings on the page.



BMW X5 2000-2006

-

Continued on Pg. 2


95-9308B DASH DISASSEMBLY

95-9308B KIT ASSEMBLY


BMW X5 2000-2006

.....Continued from Pg. 1

C

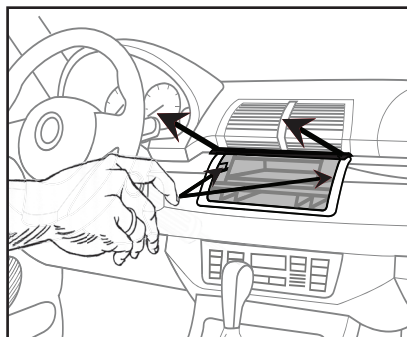

D

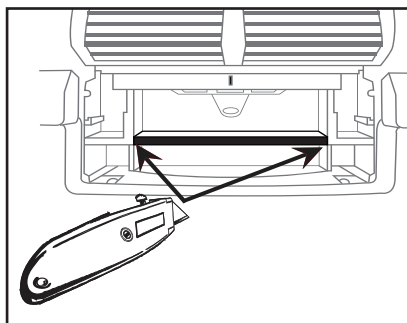


Continue to Kit Assembly

BMW X5 2000-2006

1

Mount the DDIN radio to the supplied DDIN brackets using the ISO screws supplied with the aftermarket radio (screws must be flush). (Fig. A)


A

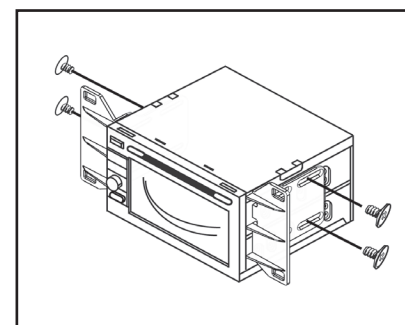

2

Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapters from Metra and AXCESS to integrate your new radio. Re-connect the negative battery terminal and test the unit for proper operation.

B

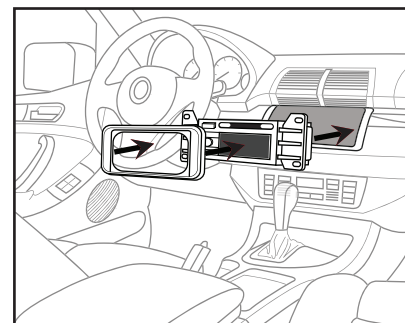

3

Snap the radio bracket assembly into the dash opening (tight fit). (Fig. B)

4

Snap the DDIN trim plate over the radio (be sure to align the snaps with the holes in the brackets or it won't seat properly). (Fig. B)